 



DANCOVER[®]

 
 

 


 
 

 
 
 
 
 


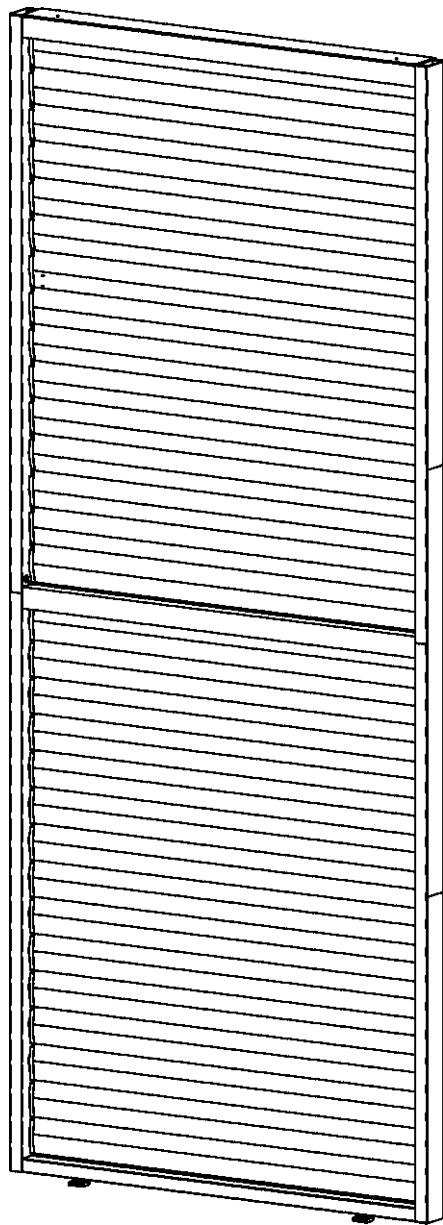 


 


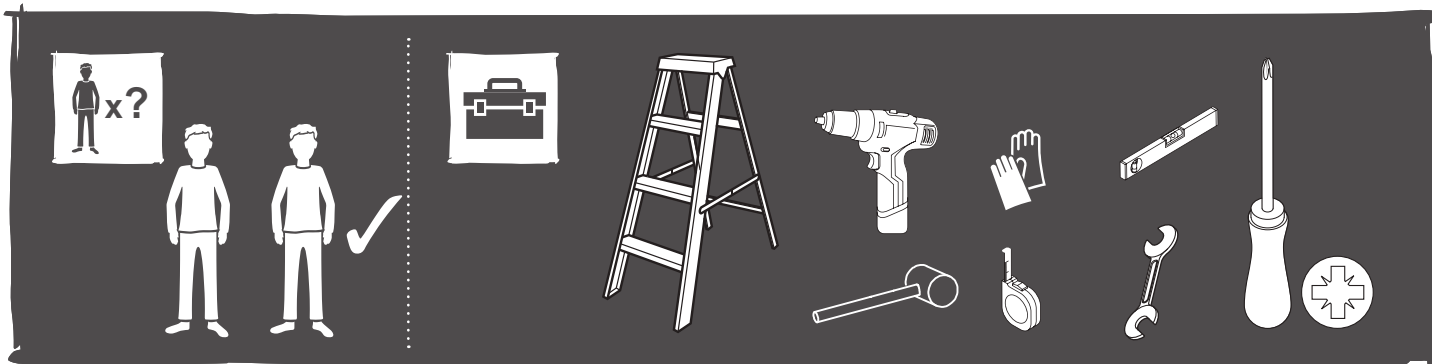
 



 






Manual
for
Louver Wall for
Pergola Gazebo San Pablo



Alu. turnover louvered wall



A		 2 pcs	III	5		4 pcs	
B		 2 pcs		6		4 pcs	
C		 1 pcs		IV	7		4 pcs
D		 1 pcs			8	 st4.2x10	4 pcs
E		 1 pcs	V	9	 st4.8x20	8 pcs	
F		 30 pcs	VI	10	 st4.8x40	4 pcs	
G		 2 pcs		11	 M5x12	6 pcs	
H		 6 pcs	VII	12	 st2.2x14	30 pcs	
I	1	 2 pcs		13		2 pcs	
	2	 4 pcs		14	 st4.2x16	4 pcs	
	3	 4 pcs		15	 st4.2x25	2pcs for 90cm 3pcs for 123cm	
II	4	 60 pcs	16	 st4.2x38	2 pcs		



EN Installation

 
01



A x2



B x2

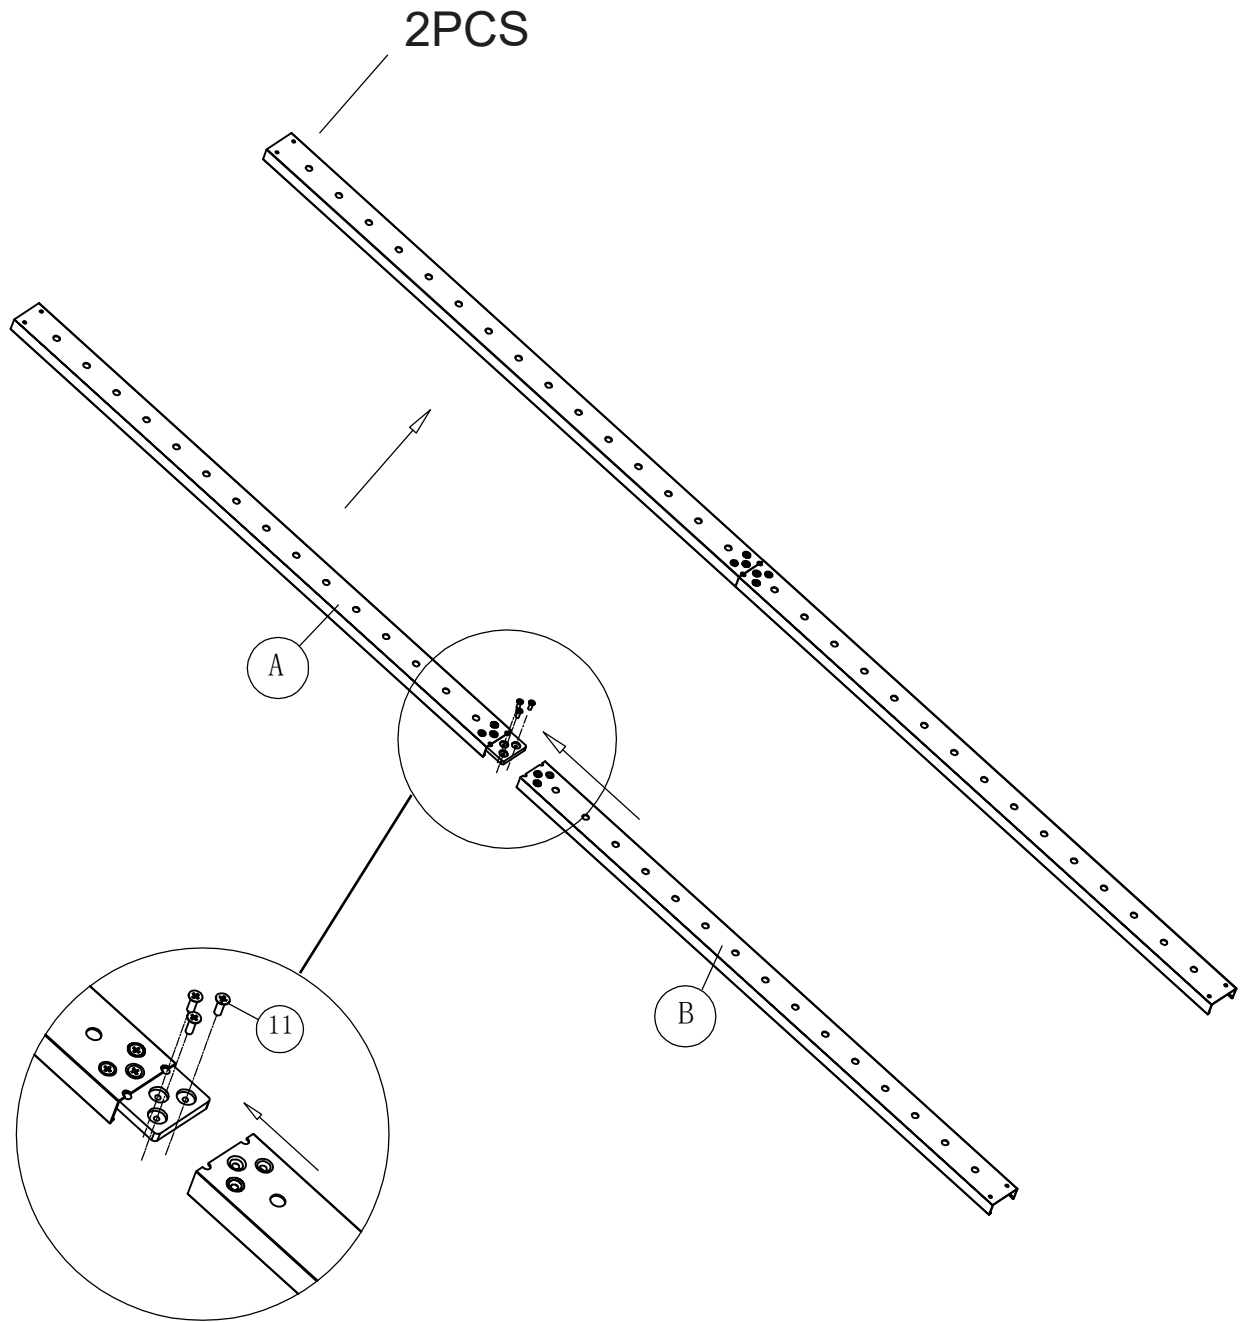


⌀ M5x12

11 x6


02

 Ⓞ
④ x60

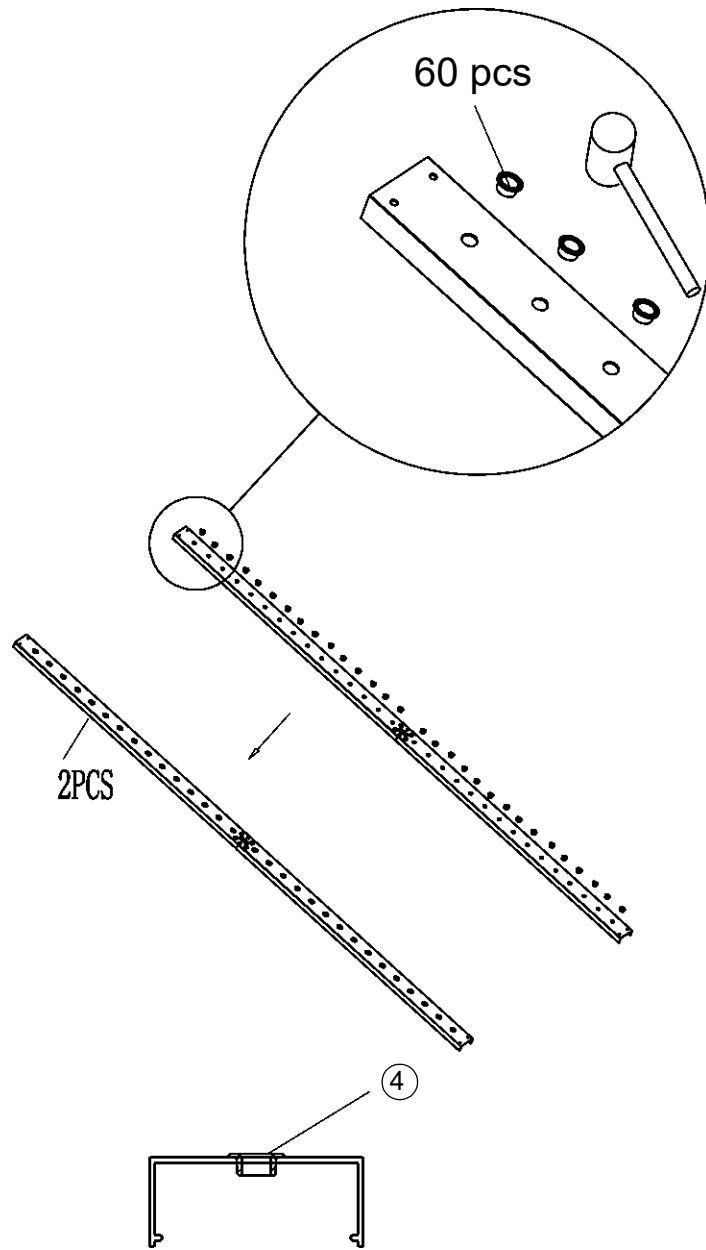

Tips:
When installing the sleeve④, it must be attached to the frame. Make sure it is flat and not wrapped.

 03



C x1



D x1



E x1




1 x2

st4.8x20

9 x8

st4.8x40


 
10 x4

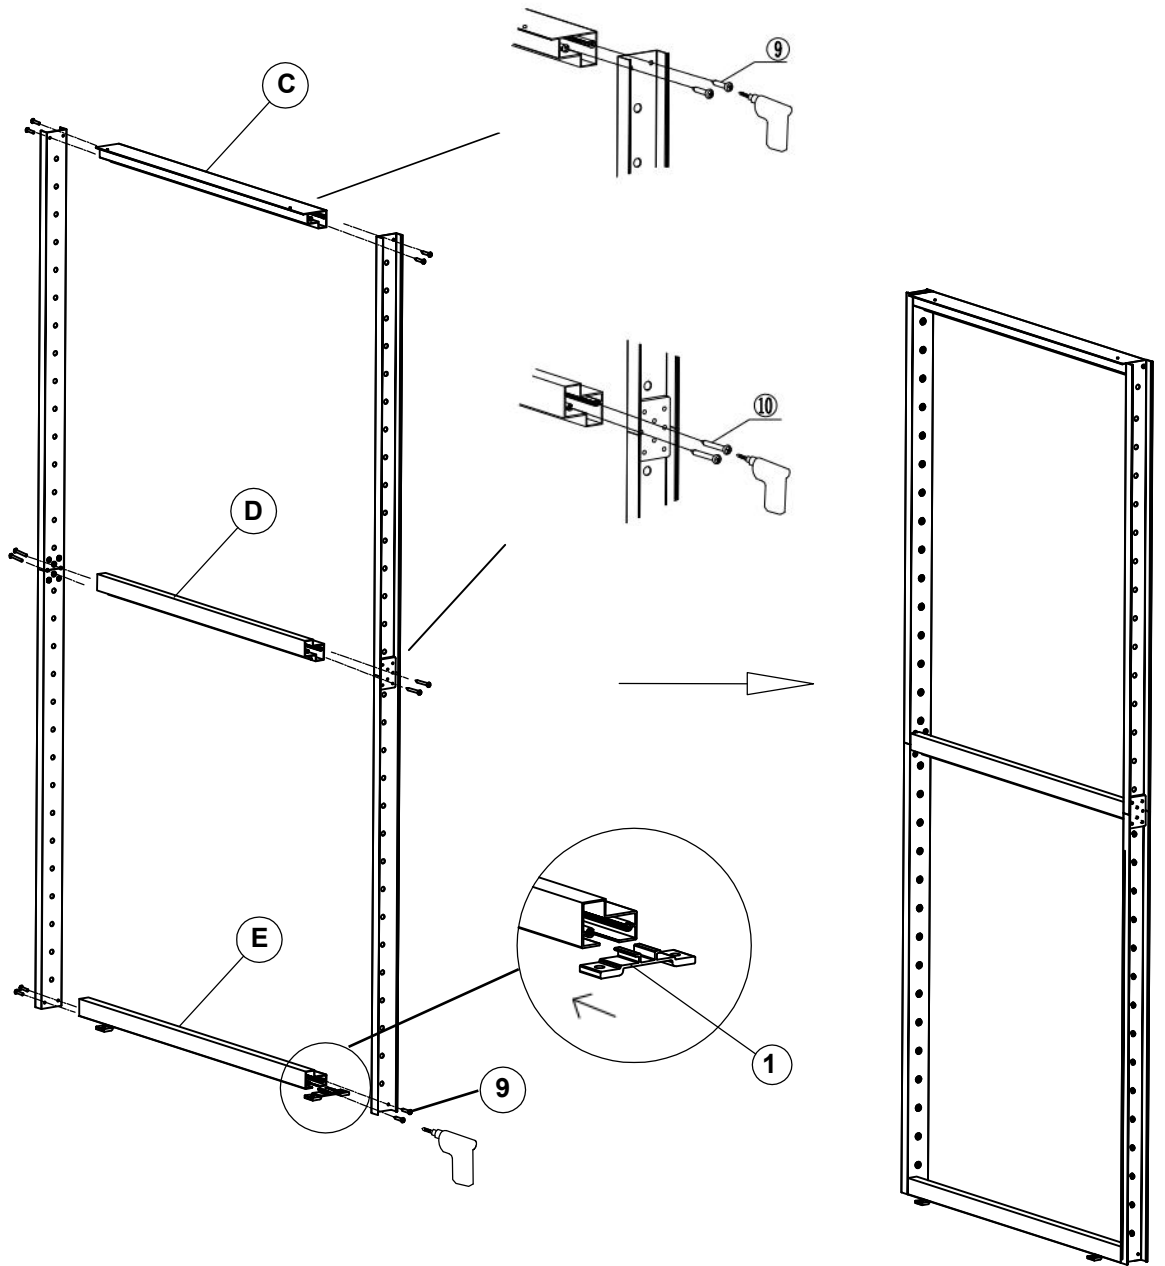


04



 
 
(F) x30

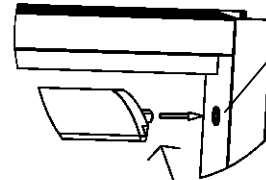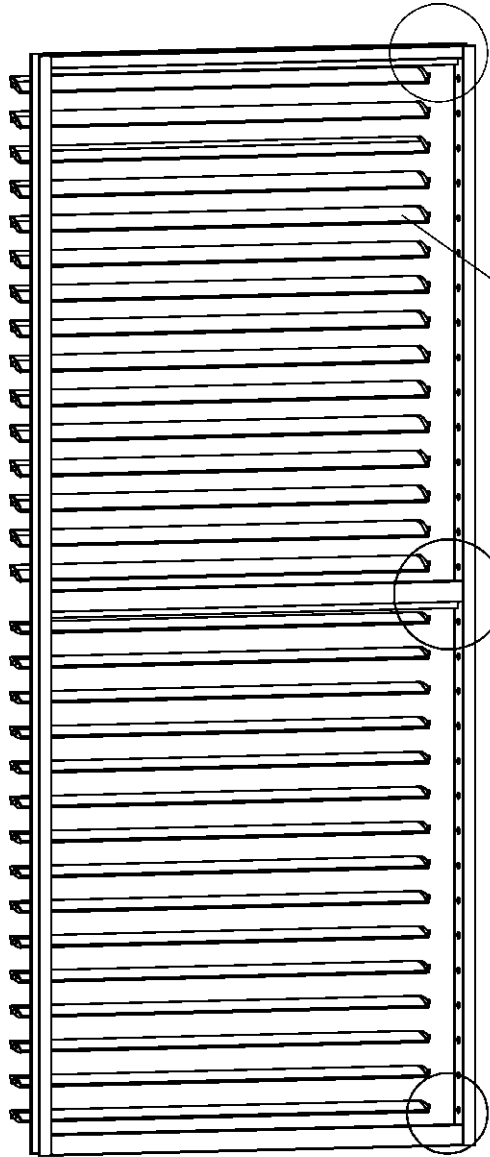


 
Insert the fixed shaft end of the louver into the shaft hole of side beam first

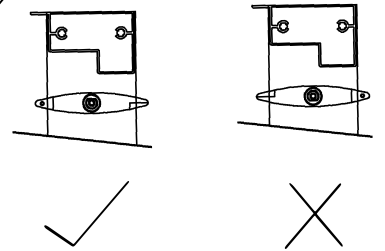

(F)

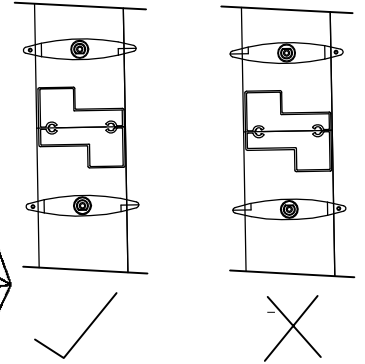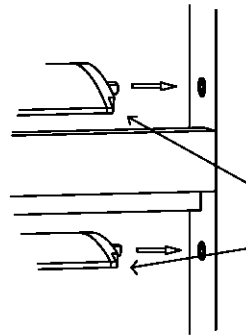  


  TIPS:
WHEN INSTALL THESE 4 LOUVERS, PLEASE PAY ATTENTION TO THE DIRECTION OF THE SCREW HOLE OF THE COVER TO FACILITATE THE INSTALLATION OF THE CONNECTING ROD.

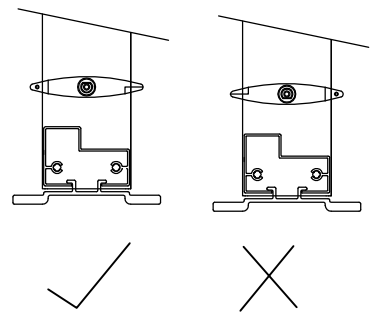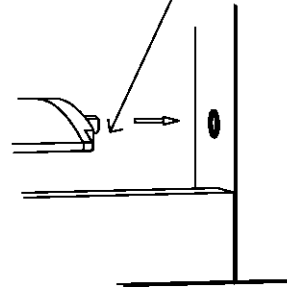

05

 Spring retractable inside the shaft

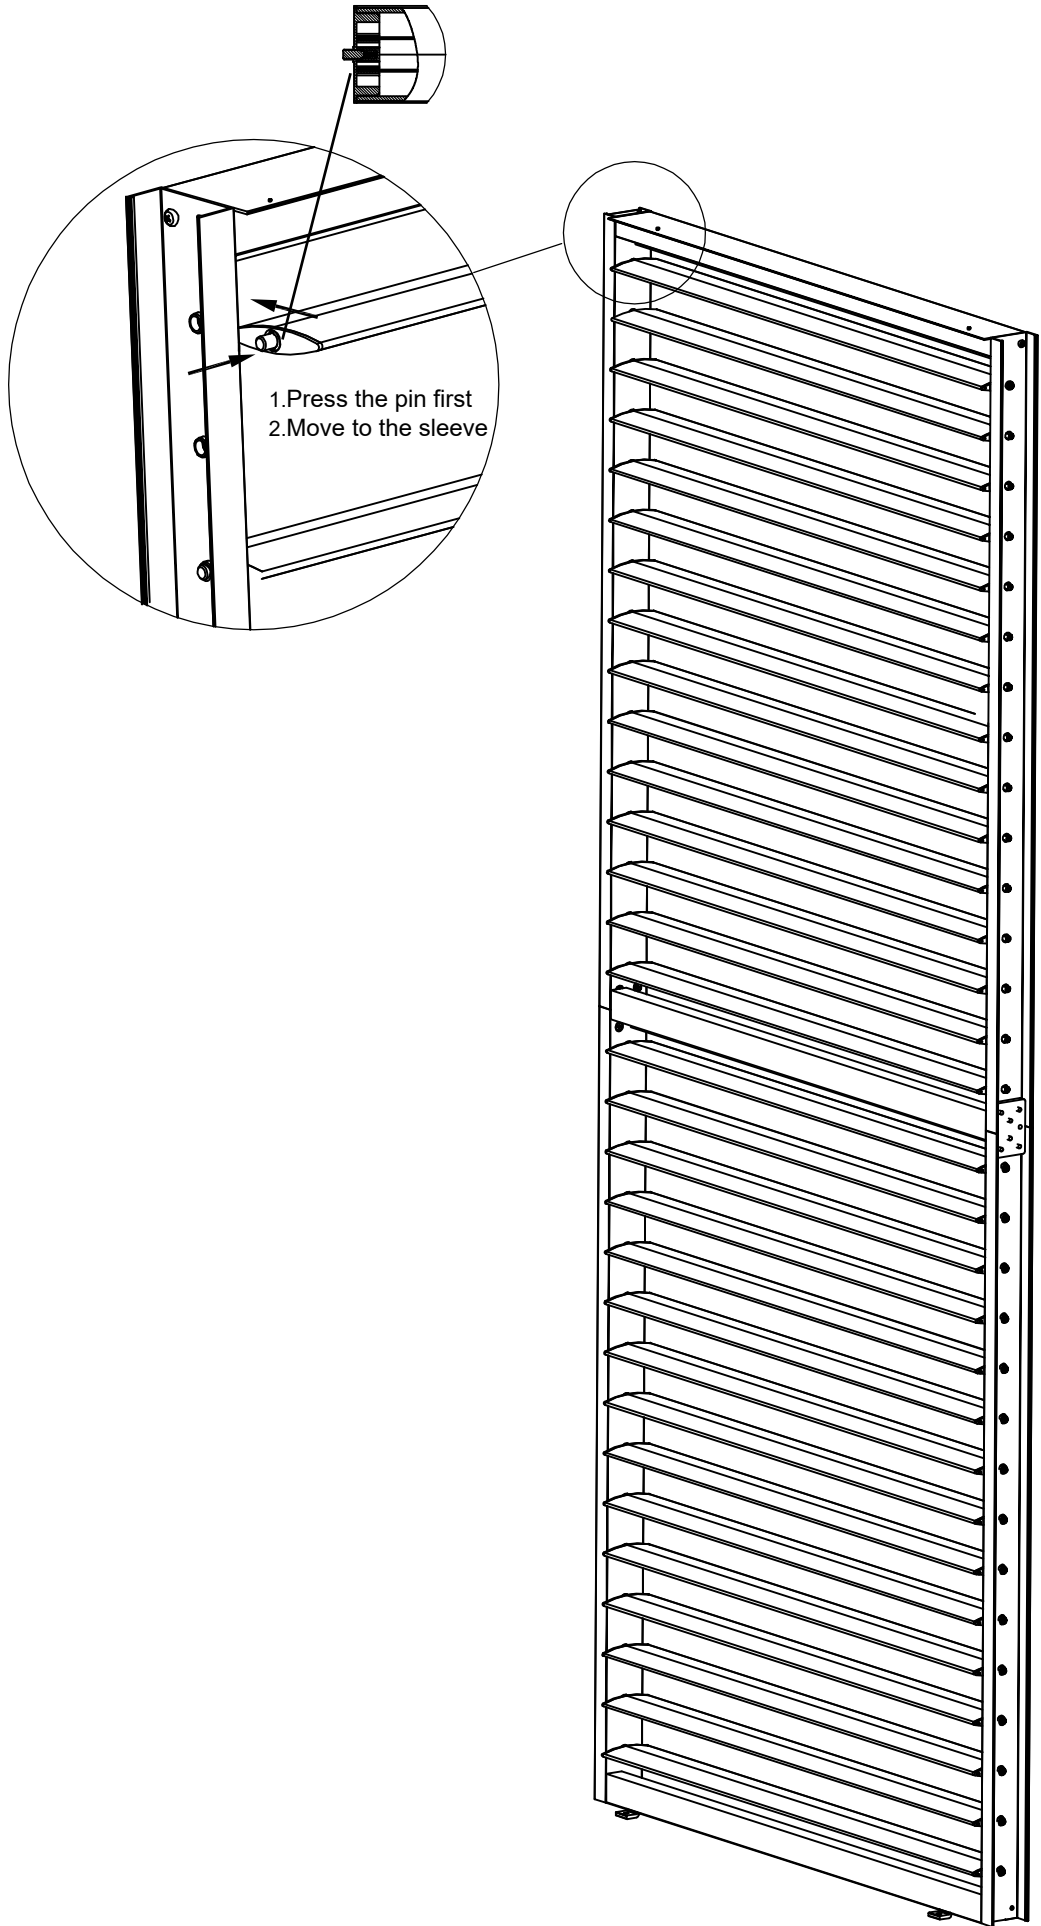

06



5 x4





6 x4



7 x4

st4. 2x10

  8 x4

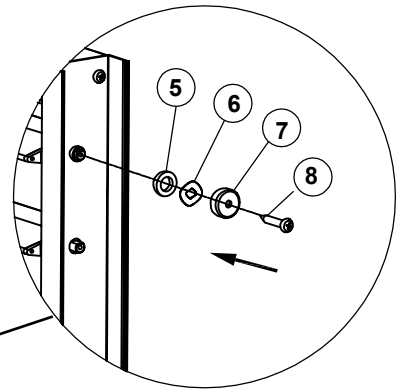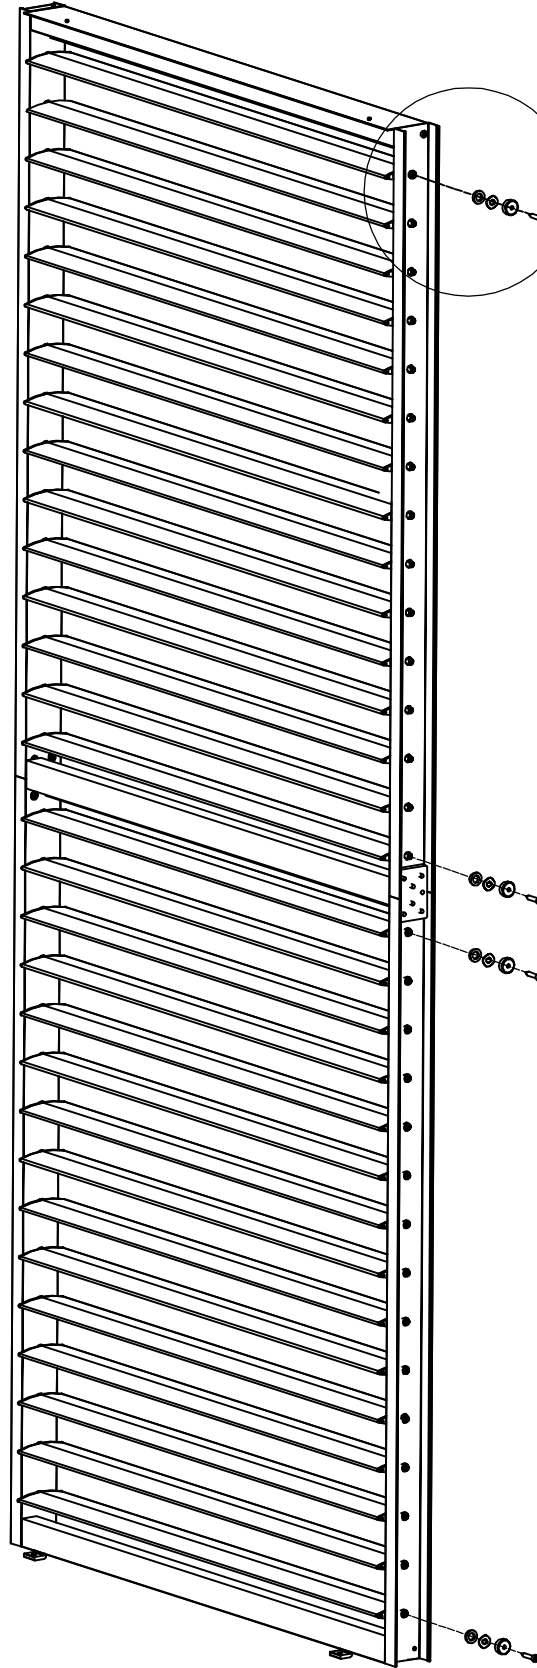

NOTE:
WHEN INSTALLING THE
DAMPING DEVICE, THE
TIGHTNESS OF THIS SCREW
NEEDS TO BE ADJUSTED
DURING INSTALLATION, SO AS
TO AVIOD THE SITUATION THAT
THE LOUVER DOES NOT
ROTATE DUE TO THE INCREASE
OF THE DAMPING.


07




G x2

st2.2x14



 
12 x30

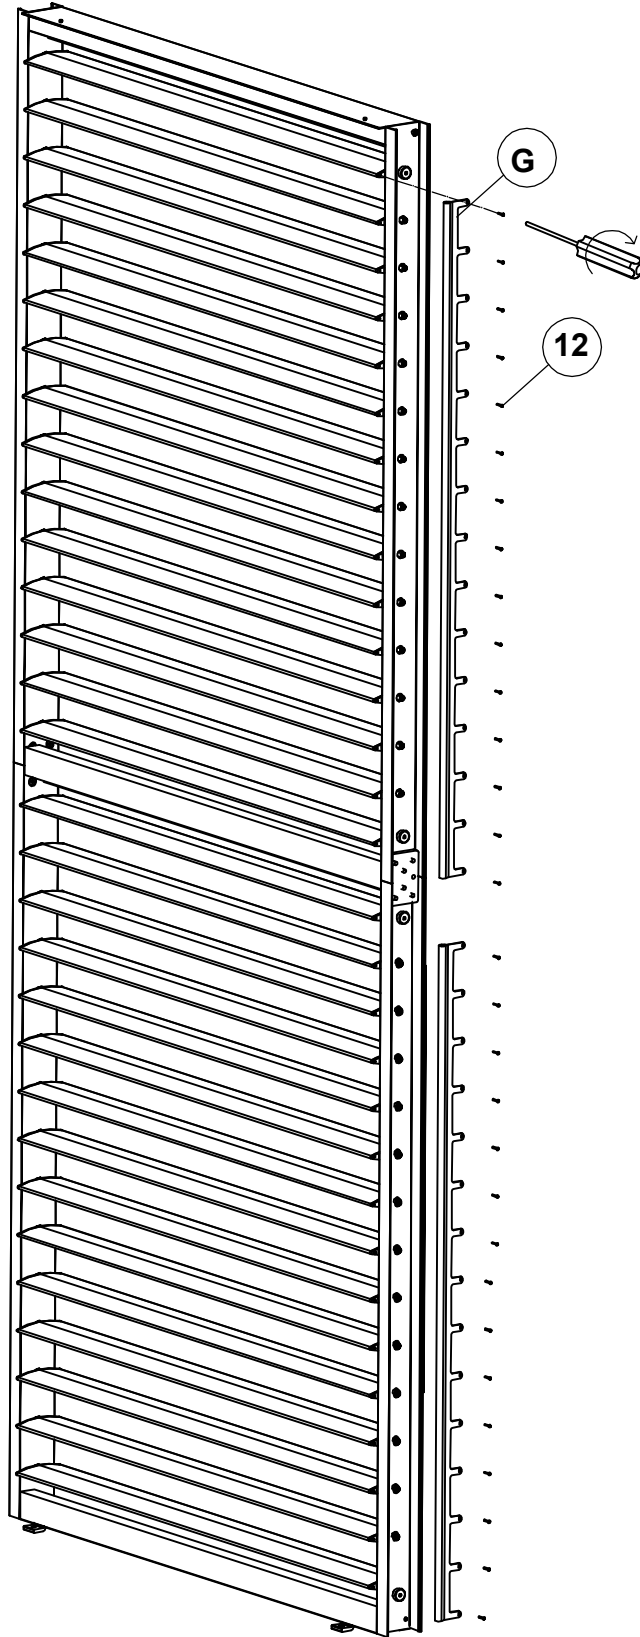

 
! DO NOT OVERTIGHTEN THE SCREW OR THE LOUVERS MAY NOT WORK SMOOTHLY.

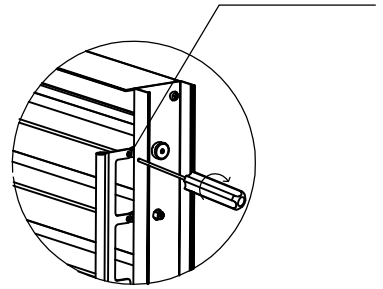



08

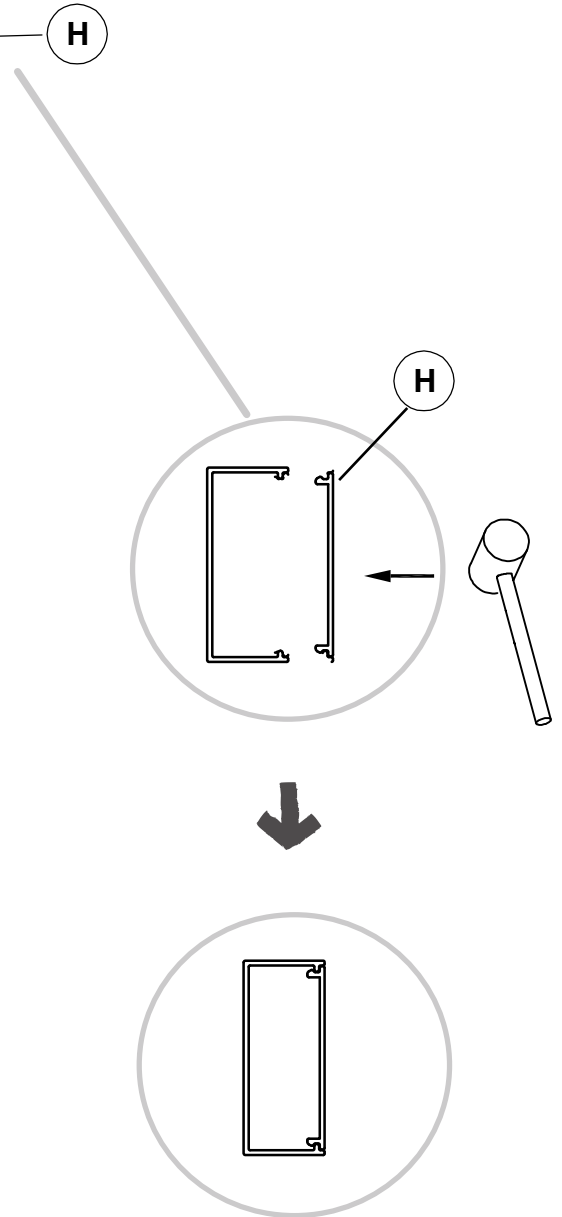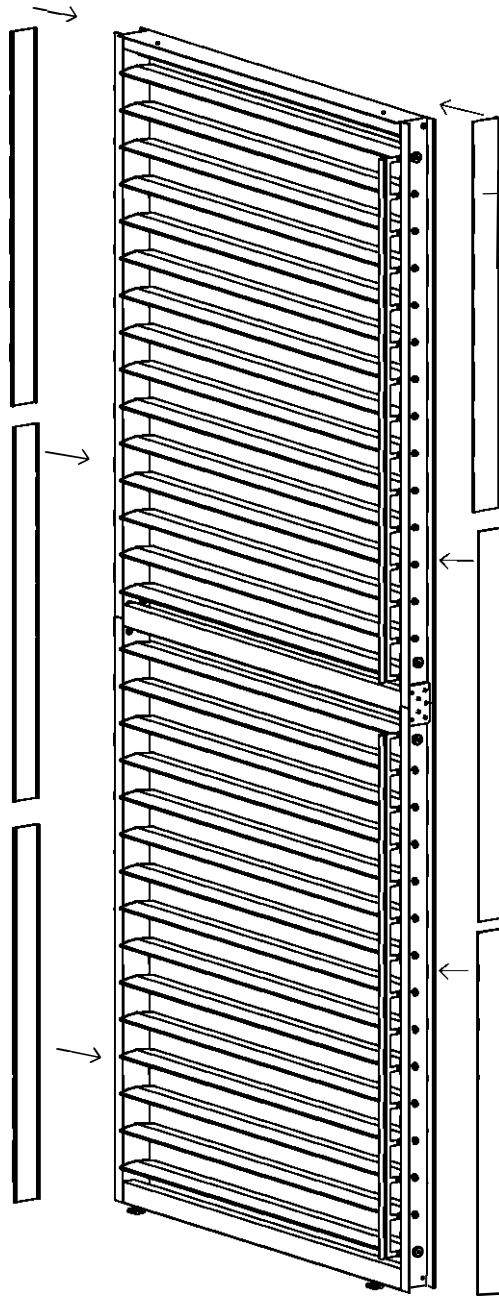   


09

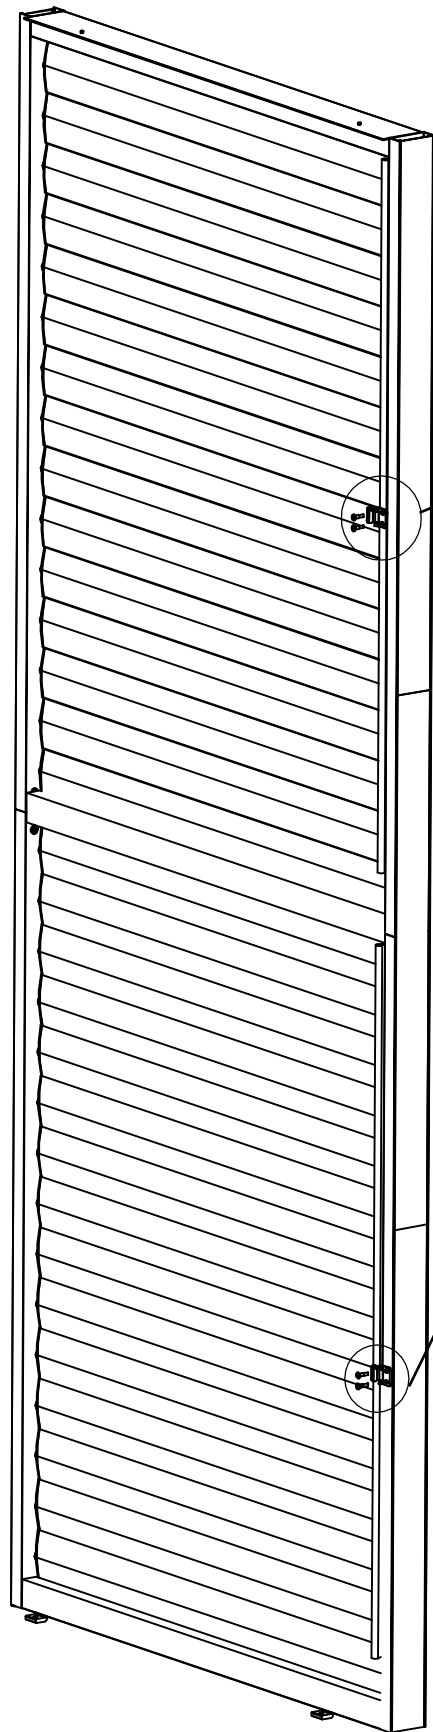 

  
Close the louver when install the locker

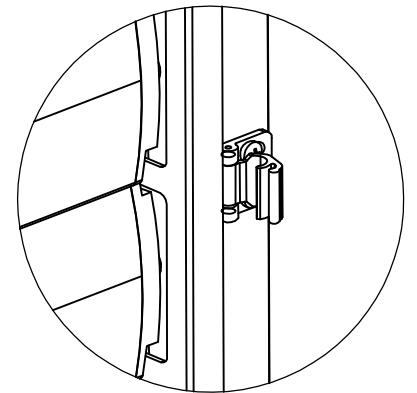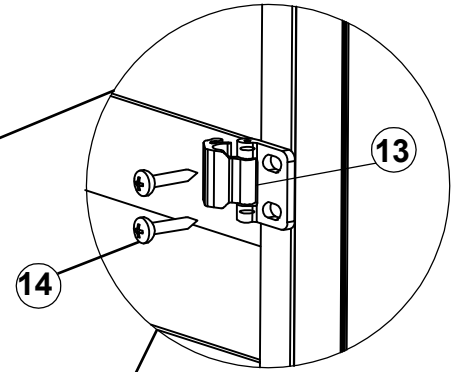



locker open, louver could be moved

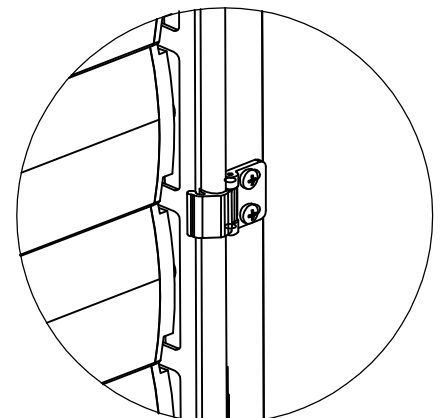 

 locker closed, louver could not be moved

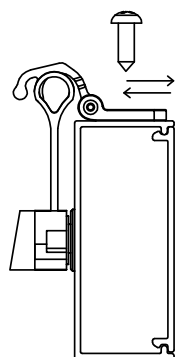

 
 
Tips: when installing the locker, it is necessary to adjust the distance with the connecting rod, so that when the lock is closed, there is a damping with the connecting rod, so as to achieve the locking function.

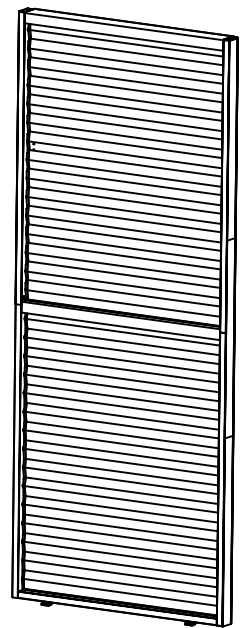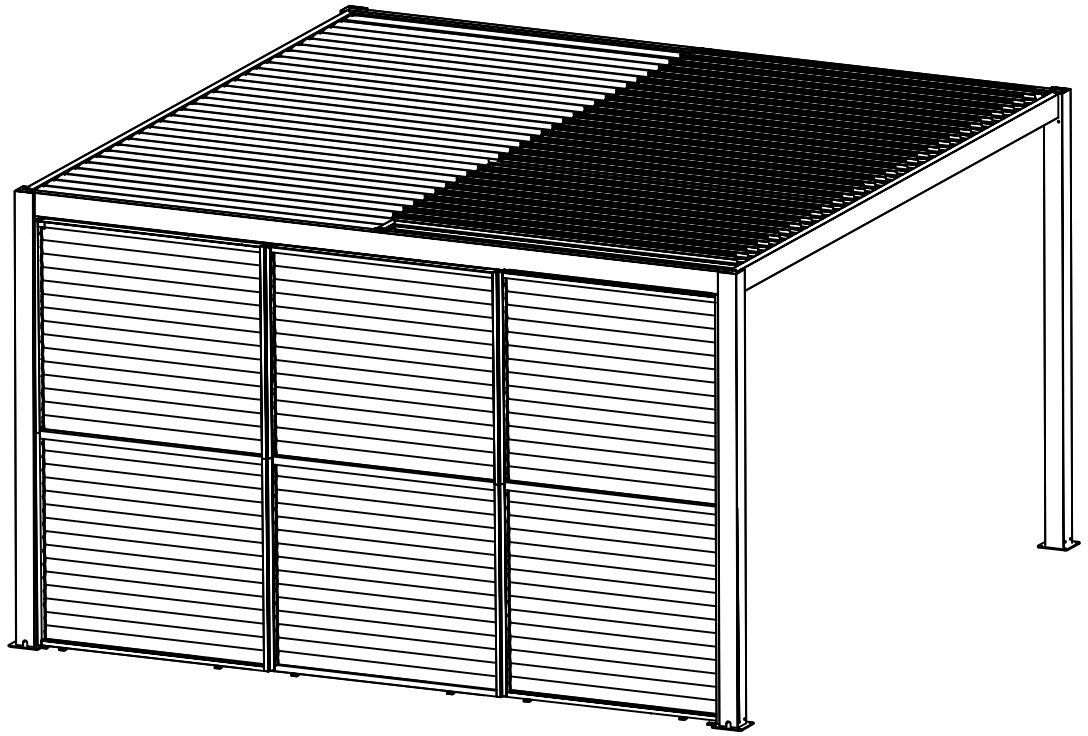


11

Install the louvered wall on the pergola

  - st4. 2x25
- 15
x2) for 90x218
x3) for 123x218

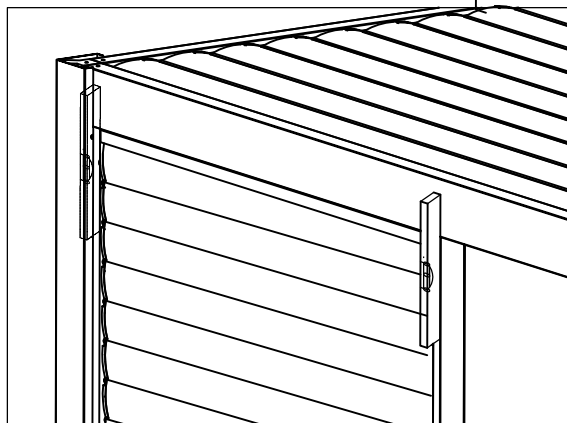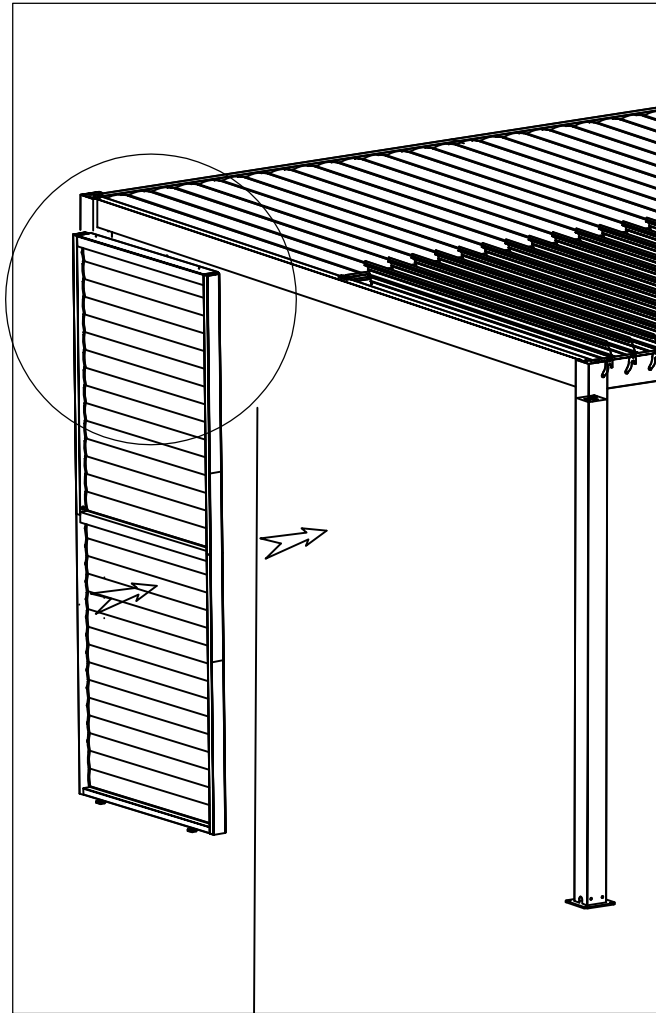


Outside

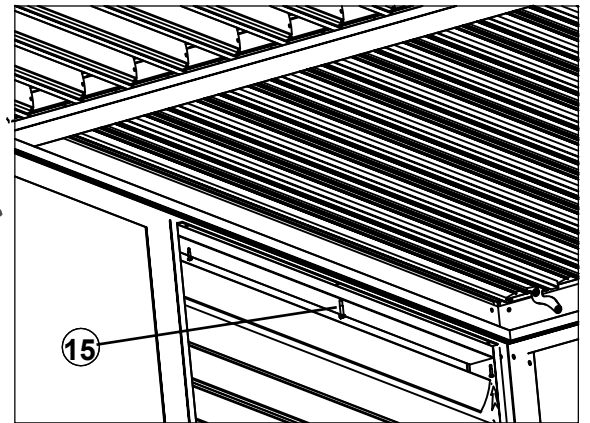 


Inside




 
12

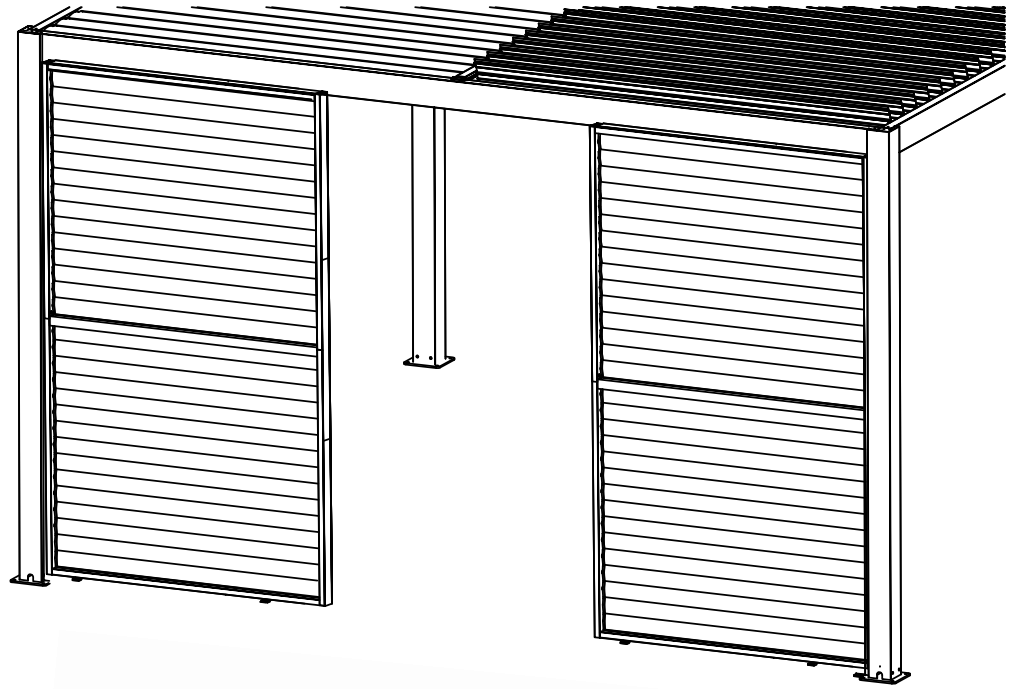

②x4

 


③x4

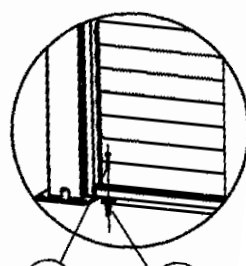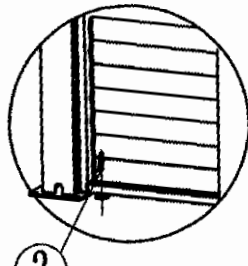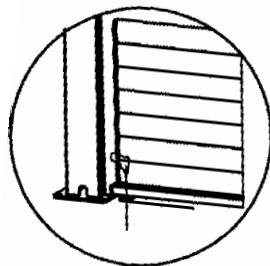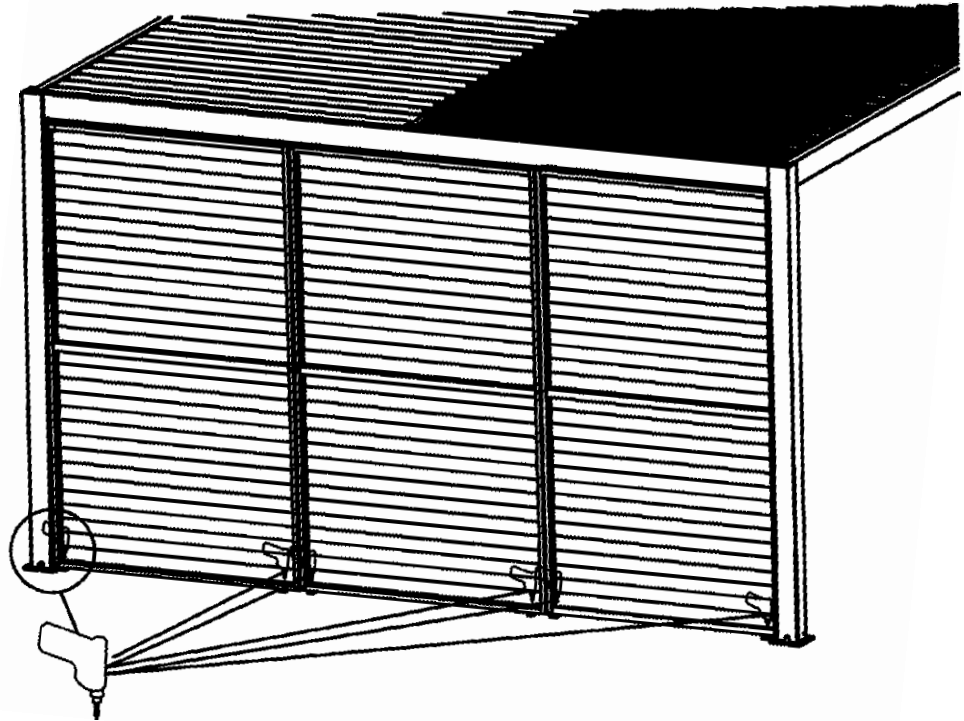    

13

 If this product is to be installed with one pc on each side, you need to replace the screw M5x12 with st4.2x38 which to be fixed to the column to prevent shaking.

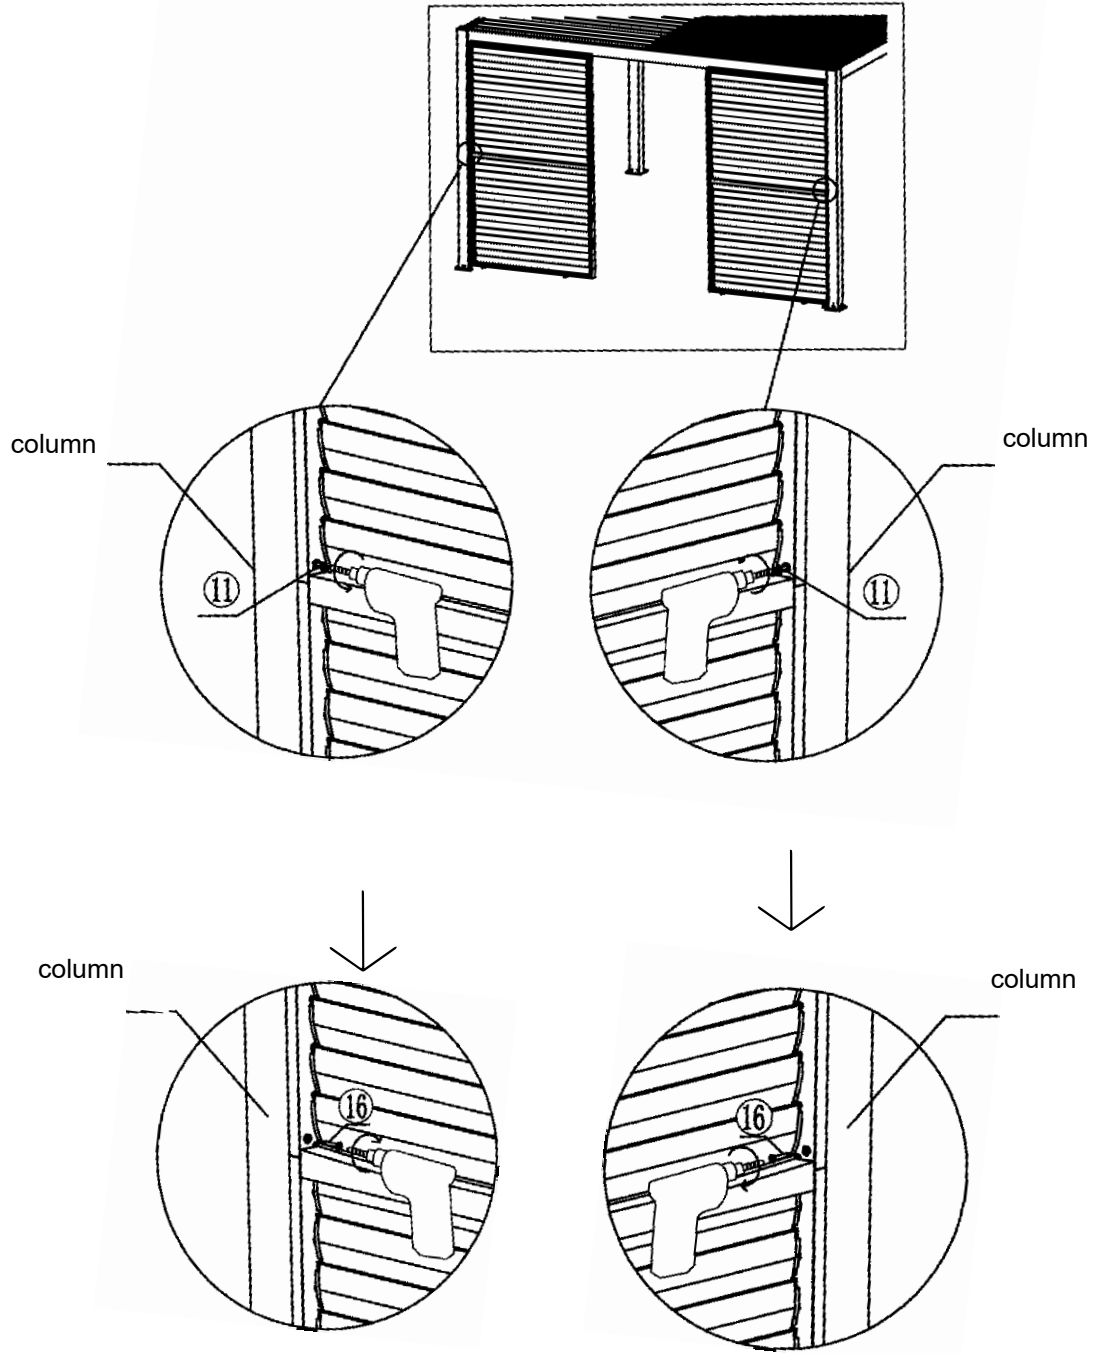

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

