

CosyLifeStyle[®]

Manual
for
Remote Control
for
Bioclimatic Pergola
Gazebo Génova

Annex

Remote Control



2 ZIP SCREEN SYSTEM SYNCHRONIZATION



The screen motor must be disconnected from the power supply if connected.




2.1 Plug in the motor of the screen to be synchronized, it will emit a sound and make a movement.

2.2 On the Remote



2.2

Hold down the button corresponding to the channel to be assigned to the desired screen (1, 2, 3 or 4), until it beeps. (Example: Channel 1)

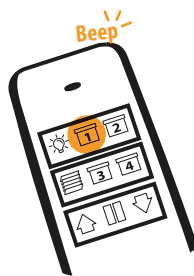

2.3

Hold down the button of the channel again until it beeps.



2.3

Hold down the UP or DOWN button for a few seconds until it beeps 4 times.

3 ZIP Screen Limits Setup (First Step)

3.1



3.1.a

Hold down the button of the channel assigned to the screen until it beeps. (E.g. Channel 1)



3.1.b


Hold down the UP button until it beeps.



3.1.c


Hold down the button of the assigned channel (e.g. channel 1) until it beeps 3 times.

3.2 Set the Upper Limit

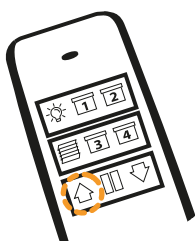

3.2.a

Briefly press the UP button until the screen starts to rise to the preset position (Upper limit).

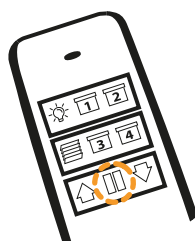

3.2.b

Briefly press the PAUSE button when the screen reaches the desired upper limit position.




3.2.c

Hold down the PAUSE button until it beeps 3 times and makes a movement.

Annex


Remote Control

3.3 Set the Lower Limit

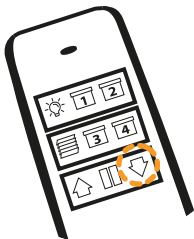


3.3.a

Briefly press the DOWN button until the screen starts to lower to the preset position (lower part).

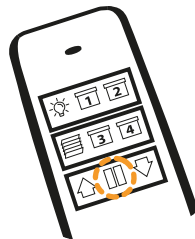

3.3.b


Press the PAUSE button when the screen reaches the desired lower limit position.

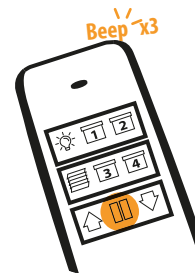

3.3.c

Hold down the PAUSE button until it beeps 3 times and makes a movement.

End Limit Resetting - Screens

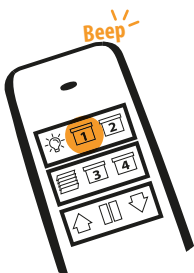

A

Hold down the button of the channel assigned to the screen you wish to reset.



B

Hold down the PAUSE button until it beeps.



C

Hold down the button of the channel of the screen we are interacting with until it beeps 3 times and the screen makes a movement.

Limit Setting Removal



A

Hold down the button of the channel associated to the screen to be reset.



B

Hold down the DOWN button until it beeps.



C

Hold down the button of the channel of the screen we are interacting with until it beeps 3 times and the screen makes a movement.

Multiple Remote Control Programming on a Single Screen



A

On the main remote, **hold down** the button of the screen channel on which you want to associate the secondary remote, until it beeps.

Main remote control



B

Hold down this channel again until it beeps again.

Main remote control



C

On the secondary remote, **hold down** the button of the channel to be associated with the desired screen until it beeps 3 times.

Secondary remote control

Multiple Screens Setup on a Single Channel



The screen motor must be disconnected from the power supply if connected.



- 2 Connect the motor of the screen we want to synchronize to the power supply, it will emit a sound and make a movement.



A

Hold down the button of the channel of the screen on which you want to act until it beeps.



B

Hold down the button of the channel of the screen in which you are interacting until it beeps.



C

Hold down the UP or DOWN button until it beeps 3 times.

- 3 Repeat step 2 with the following screens, taking into account that the motor of the screen to be linked must be disconnected from the power supply.

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

